

Instructions

Activating voice

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press **1-A** and the 'Voice' LED will turn on. **VOICE** ●
3. Now release the **MENU** button, voice is now enabled.

To disable voice

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press **1-A** and the 'Voice' LED will turn off. **VOICE** ●
3. Now release the **MENU** button, voice is now disabled.

Changing sensitivity

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press and release **2-B** and the and the sensitivity will display on the **SENS** LEDs.
● **1-A** = Low sensitivity, ● **2-B** = Medium sensitivity, ● **3-TP** = High sensitivity.
3. To change the setting to Low press **1-A**, to change to Medium press **2-B**, to change to High press **TP**.
4. Release the **MENU** button, and the new setting has now been stored.

Selecting auto mode

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press and release the **TP** button and the 'Auto' LED will turn on. **AUTO** ●
3. Now release the **MENU** button, auto function is now enabled.

Disabling auto mode

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press and release the **TP** button and the 'Auto' LED will turn **AUTO** ●
3. Now release the **MENU** button, auto mode is now disabled.

Auto function operation

1. When you press button **1-A**, the firing sequence is activated.
2. First call will be **1-A**, second **2-B**, and third **TP**.
3. This sequence will repeat as long as voice is detected.

Normal operation

1. Press either **1-A**, **2-B** or **TP** to activate voice. This will stay active for 3 minutes with 3 second dead time between each call. The 3-minute timer will be reset on every call.
2. Press and release the **MENU** button at any time to deactivate operation.

